HOME
DECORATORS
COLLECTION

BF-25229 WUCHOW CABINET 34″Hx47.75″W

INV#20741

ASSEMBLY INSTRUCTIONS

Made In China

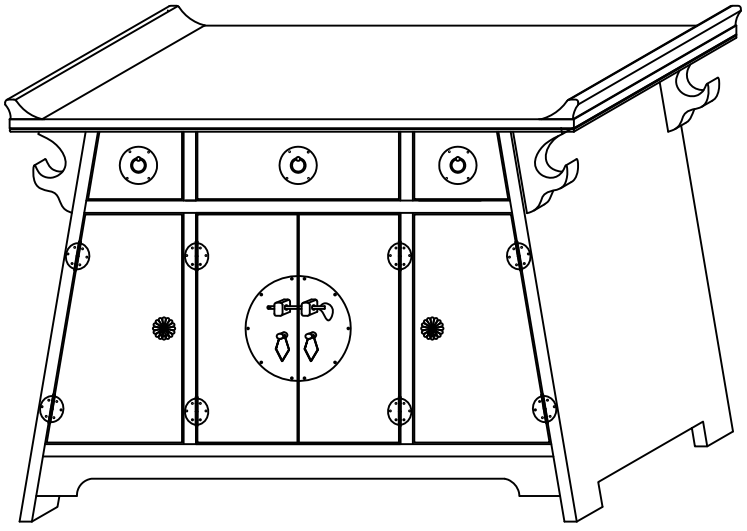

Thank you purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all part are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A 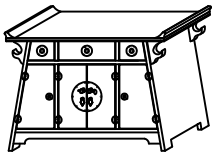 CABINET-1PC	B  SHELVES-2PCS	C  SHELF-1PC
D SHELF SUPPORTS-8PCS	E  METAL BOLT-1PC	F 6mm×3/4″  SCREWS-4PCS
G 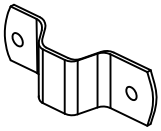 HOOKS-4PCS	H PLASTIC BELTS-2PCS	I GECKOS-4PCS
J 7mm×7/8″  SCREWS-4PCS		

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

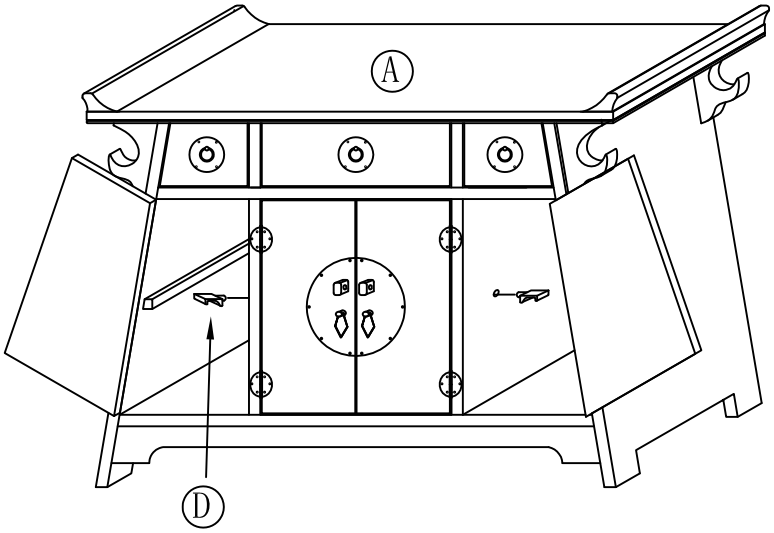

1). ASSEMBLE THE SHELF SUPPORTS(D).

● INSERT 4 SHELF SUPPORTS(D) INTO THE HOLES IN THE CABINET(A).

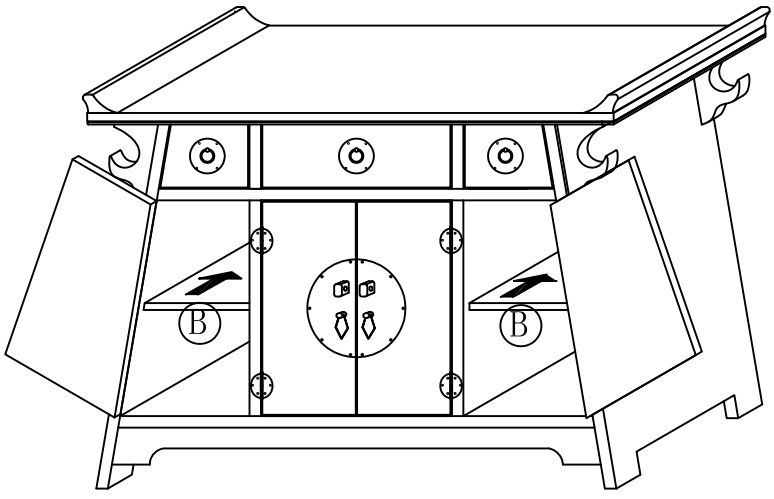

2). ASSEMBLE THE SHELVES(B).

● PUT THE SHELVES(B) ONTO THE SHELF SUPPORTS(D).

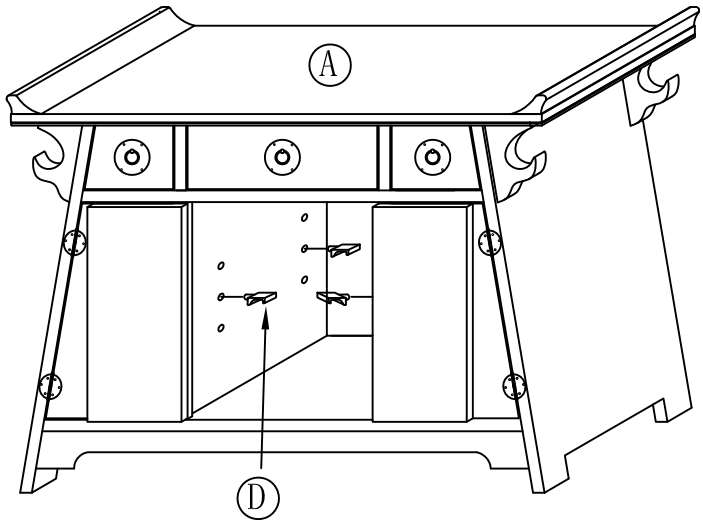

3). ASSEMBLE THE SHELF SUPPORTS(D).

● INSERT 4 SHELF SUPPORTS(D) INTO THE HOLES IN THE CABINET(A).

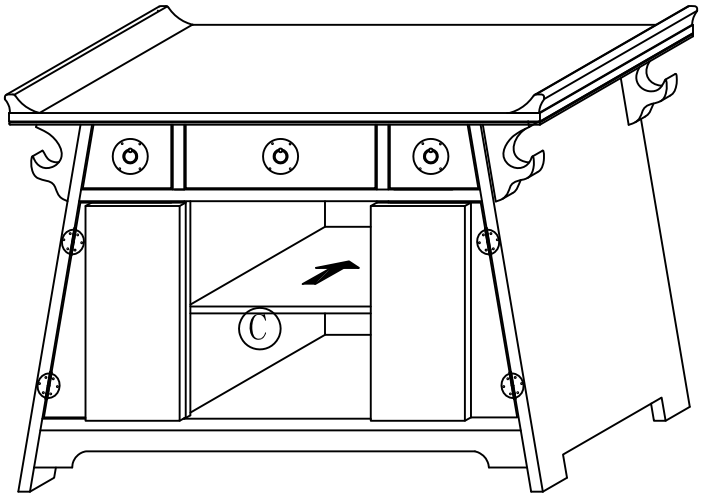

4). ASSEMBLE THE SHELF(C).

● PUT THE SHELF(C) ONTO THE SHELF SUPPORTS(D).

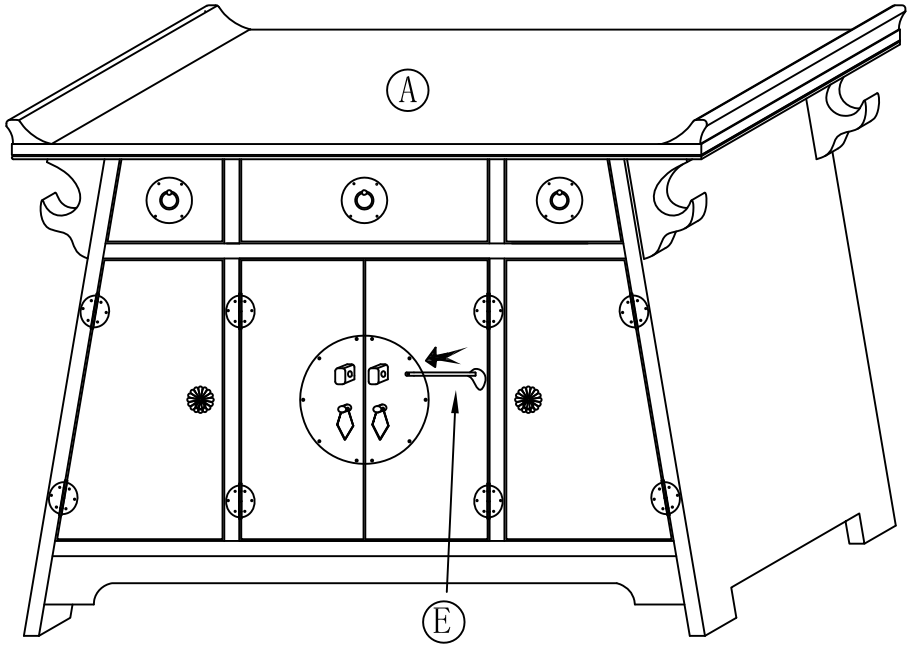

5). ASSEMBLE THE METAL BOLT(E).

● INSERT 1 METAL BOLT(E) INTO THE HOLES IN THE KNOB.

Warning

The anti-tip hardware must be used as part of assembly!

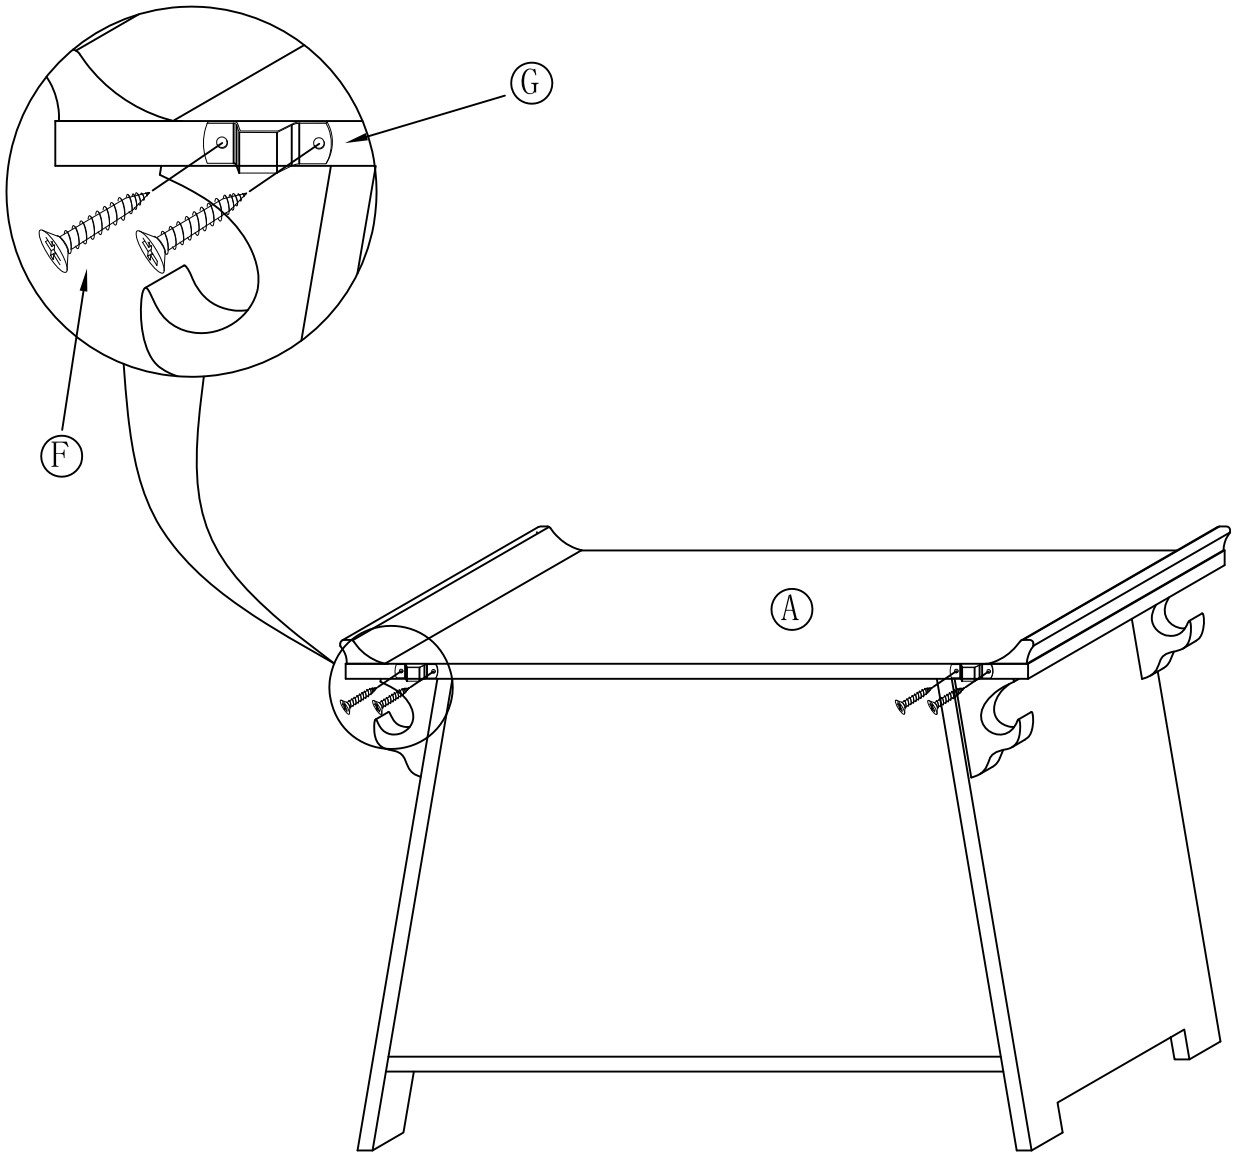

6). ASSEMBLE THE HOOKS(G).

● ATTACH 2 HOOKS(G) TO CABINET(A) USING 4 SCREWS(F).

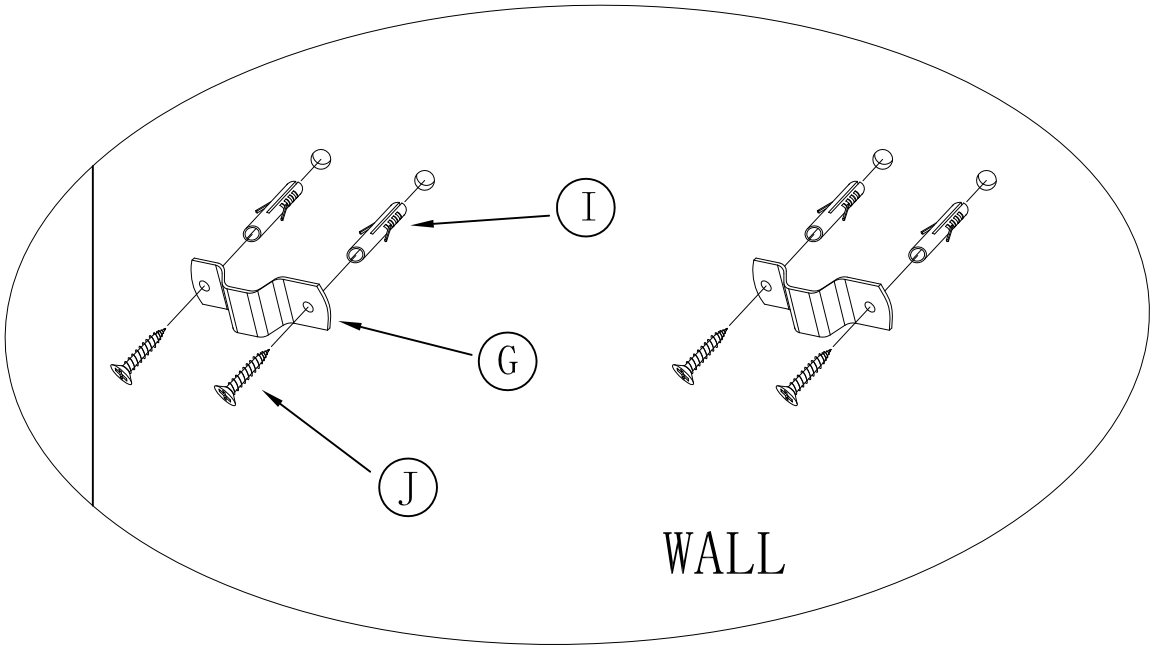

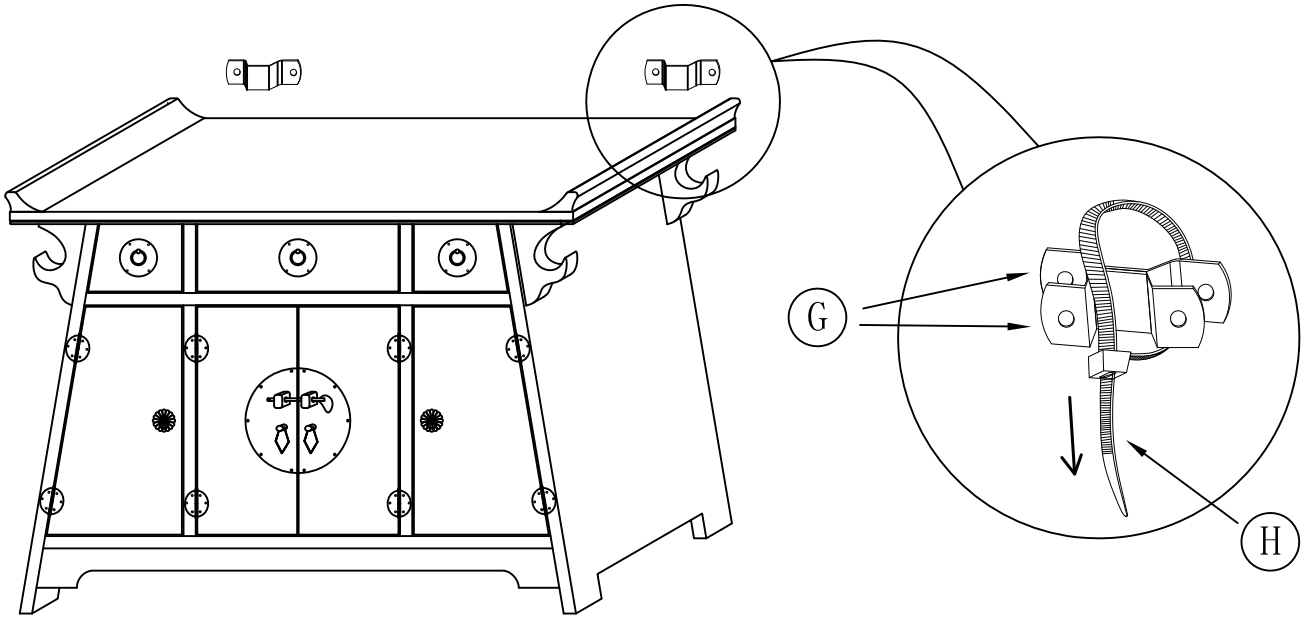

7). ASSEMBLE THE ANTI-TIP HARDWARE.

- DRILL 4 HOLES INTO THE WALL, PLEASE REFER TO THE REAR TOP PANEL'S HOLE DISTANCE AND HEIGHT.
- PUT 4 GECKOS(I) INTO THE HOLES IN THE WALL, AND ROTATE 4 SCREWS(J) INTO THE GECKOS(I).
- CONNECT THE TWO HOOKS(G) WITH A PLASTIC BELT(H).